


SIMONIZ™

Universal Foam Blaster 039-8704-8

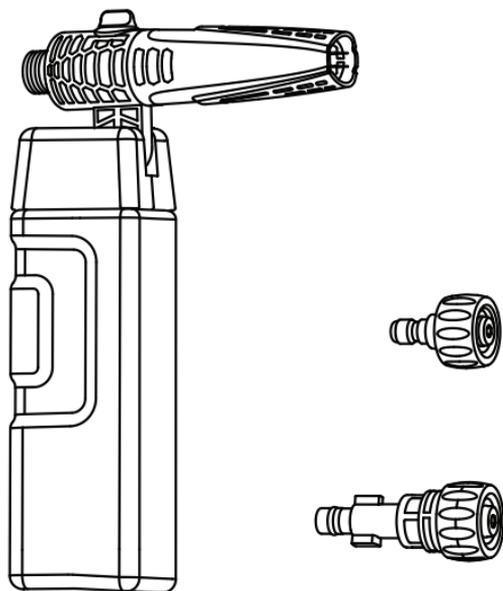

**Designed for only Simoniz® Electric Pressure Washers
(up to 2000 PSI)**

Congratulations on the purchase of your new Simoniz® Foam Blaster. In order to ensure you have the best possible experience, please read through the following instructions. If you require any help, please contact the customer service department at:

**1-866-4SIMONIZ
(1-866-474-6664)**

Contact us for assistance; we're here to help.



Use and Care Guide



Model no. AE60

Version no.
02

Table of Contents

1. IMPORTANT PRECAUTIONS.....	3
1.1 DEFINITIONS.....	3
1.2 SAFETY WARNINGS	3
1.3 INTENDED APPLICATION.....	3
2. EXPLODED VIEW.....	4
3. PARTS LIST	4
4. OPERATING INSTRUCTIONS	5
4.1 WORKING WITH THE FOAM BLASTER.....	5
4.2 ATTACHING THE FOAM BLASTER TO YOUR PRESSURE WASHER	5
4.3 APPLYING THE DETERGENT	6
4.4 WARNINGS	6
5. TROUBLESHOOTING	7
6. LIMITED WARRANTY.....	8

1. IMPORTANT PRECAUTIONS

IMPORTANT, RETAIN FOR FUTURE REFERENCE AND READ CAREFULLY!

Do not attempt to install or operate this device until you have read the safety instructions in this manual. Safety items throughout this manual are labelled with **Danger**, **Warning**, or **Caution** depending on the risk type.

1.1 Definitions

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

IMPORTANT

Installation, operation, or maintenance information which is important but not hazard-related.

1.2 Intended Application

This product is designed for specific residential applications. Do not modify or use this product for any application other than the one it was designed for. This equipment was not designed for industrial use. Please refer to the icons below for suggested applications. For questions regarding other uses, please refer to our website at www.simoniz.ca or call us at **1-866-4SIMONIZ** (1-866-474-6664).

IMPORTANT — APPLICATIONS



STAIRS



LAWN EQUIPMENT



VEHICLE



FENCING



DECK OR PATIO



GARAGE FLOOR




DRIVEWAY



SIDING

4 Exploded View / Parts List

2. EXPLODED VIEW

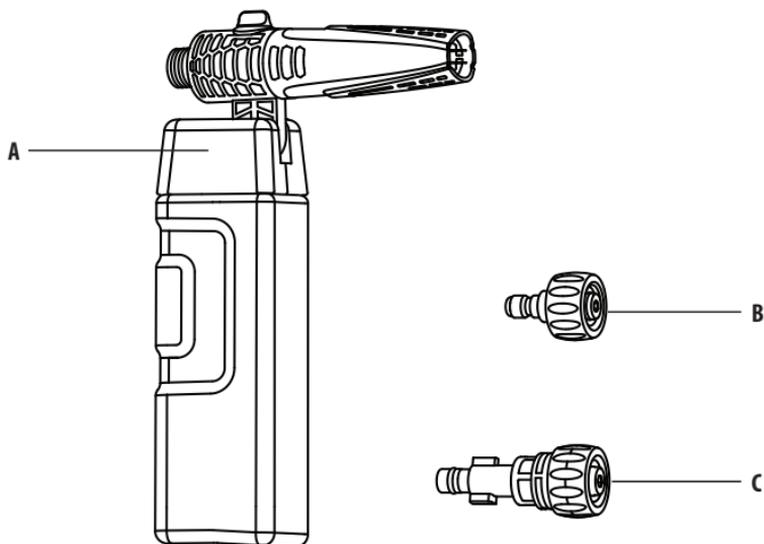

3. PARTS LIST

Item #	Part Name	Qty.	Part #
A	Foam blaster	1	XE18-060-0000
B	Adaptor 1 for quick-connect wand	1	AE60-000-0001
C	Adaptor 2 for plastic gun	1	AE60-000-0002

4. OPERATING INSTRUCTIONS

4.1 Working with the Foam Blaster


Working with a detergent ensures quick soaking of the dirt, and allows the high-pressure water to penetrate and remove the dirt more effectively. Always spray detergent on a dry surface, do not pre-soak the area. Wetting the surface first dilutes the detergent and reduces its cleaning ability.

1



Engage the safety lock on the spray gun.


2

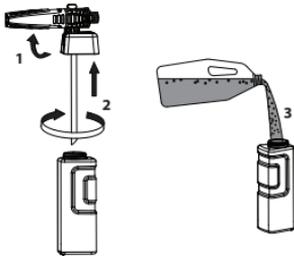

1. Rotate the foam blaster's spray head from vertical position to horizontal position.
2. Detach spray head by turning detergent bottle 1/4 turn counter-clockwise.
3. Fill the bottle with the detergent.
4. Reattach the spray head on to the bottle by turning 1/4 turn clockwise.


4.2 Attaching the Foam Blaster to Your Pressure Washer

For Metal Pressure Washer Gun (Simoniz Platinum)

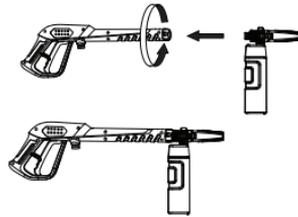


1. Attach the foam blaster onto the spray gun.

For Plastic Pressure Washer Gun

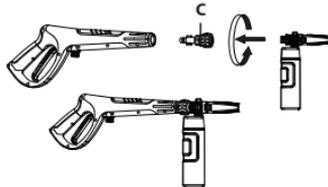

1. Attach the adaptor 2 (C) onto the plastic spray gun.
2. Attach the foam blaster onto the adaptor A.

For Pressure Washer Gun with a Quick-connect Wand

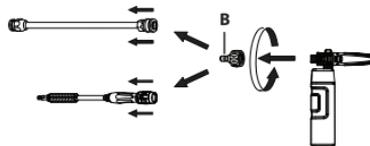

1. Attach the adaptor 1 (B) onto the quick-connect wand.
2. Attach the foam blaster onto the adaptor B.

6 Operating Instructions

4. OPERATING INSTRUCTIONS (cont.)


4.3 Applying the detergent

- 1 Apply the detergent to a dry work surface from bottom to top.
- 2 Allow detergent to remain on the surface for a short time before rinsing. Do not allow detergent to dry on the surface.
- 3 When you are finish working with detergent, fill with clean water in bottle and spray water for one minute in **ON** position.

CAUTION

Damage may occur to painted surfaces if chemicals are allowed to dry on them. Wash and rinse a small section at a time.

4

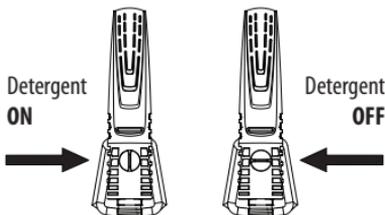


1. Set detergent **ON/OFF** knob to **ON** position to work with detergent.
2. Set detergent **ON/OFF** knob to **OFF** position for cleaning surface without detergent.

CAUTION

Failure to clean foam blaster properly will cause the detergent injection system to become clogged and inoperable.

5

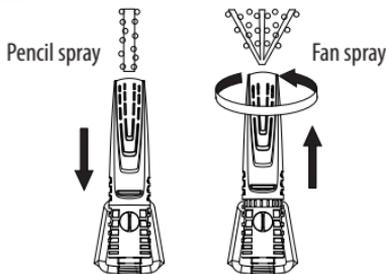

1. Pencil spray (slide collar backwards) to reach 2nd floor.
2. Fan spray (slide collar forwards) to apply detergent more efficiently. Fan spray can be adjusted 90° to spray either horizontally or vertically.

4.4 Warnings

CAUTION

Failure to clean foam blaster properly will cause the detergent injection system to become clogged and inoperable.

WARNING

Never use:

- Bleach, chlorine products or other corrosive chemicals;
- Liquids containing solvents (i.e., paint thinners, gasoline, oils, etc.);
- Tri-sodium phosphate products;
- Ammonia products; or
- Acid-based products.

These chemicals will harm the unit and will damage the surface being cleaned.

5. TROUBLESHOOTING

Disconnect the device from the power source before making any repairs.

Problem	Cause	Solution
Detergent is not working.	Detergent container is empty.	Add more detergent.
	Detergent bottle or suction tube not properly connected.	Check connections.
	Detergent is too thick.	Dilute detergent.
	Damaged or clogged detergent suction tube.	Remove obstruction or replace the detergent suction tube.
	The discharge nozzle is obstructed.	Blow out or remove debris with a fine needle.
	Detergent ON/OFF knob at OFF position.	Set to ON position.
The garden hose connection leaks.	Loose fittings.	Tighten fittings.
	Missing/worn rubber washer.	Insert new washer.
Spray wand, extension, or nozzle leaks.	Broken O-ring or plastic insert.	Call the Toll-free Hotline.
Motor hums but fails to run.	Supply voltage below minimum.	Verify that only the pressure washer is running on this circuit.
	System has residual pressure.	Turn the device OFF , pull the trigger on the spray gun to release pressure, and then turn the device back ON .
	Voltage loss due to the extension cord.	Unplug any extension cords attached and plug the unit directly into the outlet.

IF YOU ENCOUNTER ANY ADDITIONAL DIFFICULTIES NOT LISTED, VISIT OUR WEBSITE AT

WWW.SIMONIZ.CA

OR CALL CUSTOMER SERVICE FOR HELP AT

1-866-4SIMONIZ (1-866-474-6664).

8 Limited Warranty

6. LIMITED WARRANTY

Always keep your receipt as proof of purchase.

We're here to help! If you have any questions or comments, call our toll-free hotline 1-866-4SIMONIZ (1-866-474-6664). Have your serial number ready. The serial number can be found on the product.

This product has a **One (1) Year— Product Exchange Warranty only**. Please see stores for Product Exchange details.

This warranty does not cover accidental damage, unreasonable use, normal wear and tear, use of improper detergents, freezing, neglect, or non-compliance with the Operating Instructions. The warranty does not cover loss of use or other consequential damages arising from any of the above, nor does it cover repairs made or attempted by unauthorized persons.

The warranty is void if the equipment is used for commercial, rental or industrial purposes.

If you have further questions, please visit our website (www.simoniz.ca) or call 1-866-4SIMONIZ (1-866-474-6664).

Made in China

**Imported by
Trileaf Distribution Trifeuil Toronto, Canada M4S 2B8**