




## 2500 PSI Gas Pressure Washer

039-8071-2

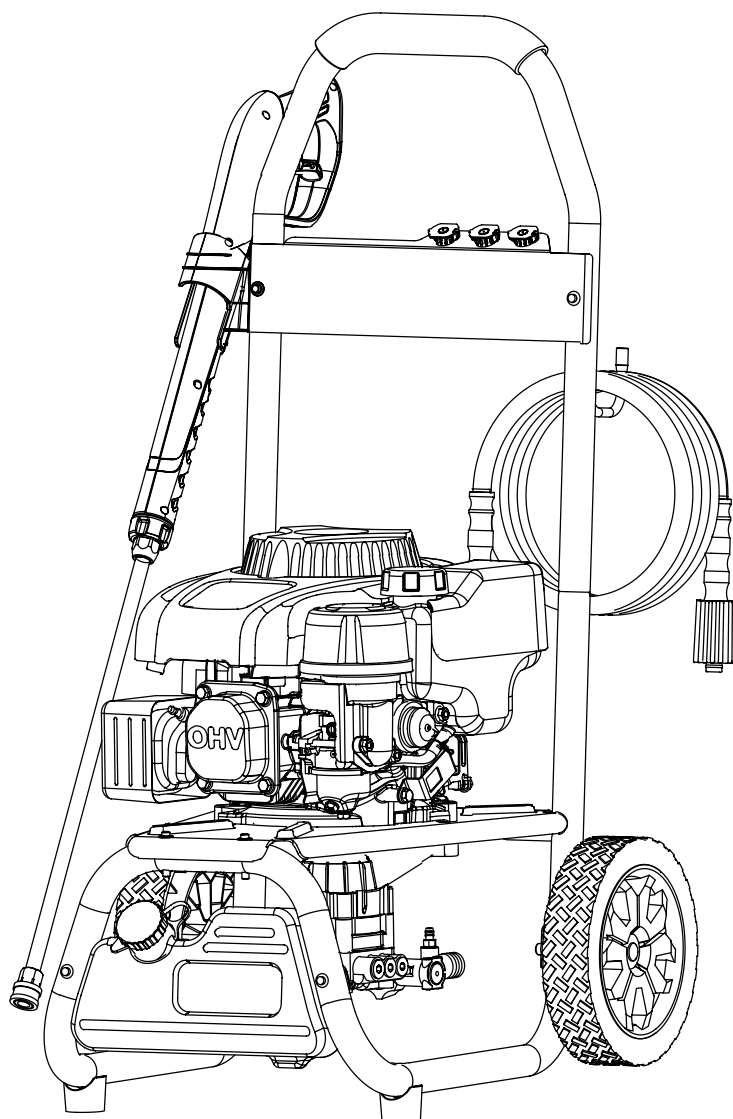

# Use and Care Guide

**Congratulations on the purchase of your new pressure washer. In order to ensure you have the best possible experience, please read through the following instructions. If you require any help, please contact the customer service department at:**

**1-866-474-6664**

*Contact us for assistance; we're here to help.*



Model no. UG03

Version no. 00

# Table of Contents

---

1. SAFETY ADVICE .....	3
1.1 DEFINITIONS .....	3
1.2 SAFETY WARNINGS .....	3
1.3 INTENDED APPLICATIONS .....	7
2. EXPLODED VIEW .....	8
3. PARTS LIST .....	8
4. ASSEMBLY INSTRUCTIONS .....	9
4.1 SURFACE PREPARATION .....	9
4.2 WATER SUPPLY (COLD WATER ONLY) .....	9
4.3 ASSEMBLY STEPS .....	9
5. ENGINE OPERATION .....	12
5.1 ADDING / CHECKING OIL .....	12
5.2 ADDING FUEL .....	13
5.3 CHECKING AIR FILTER .....	14
5.4 PURGING .....	14
5.5 STARTING ENGINE .....	15
5.6 STOPPING ENGINE .....	15
6. CLEANING WITH DETERGENT INSTRUCTIONS .....	16
6.1 CLEANING WITH DETERGENTS .....	16
6.2 WORKING WITH THE DETERGENT .....	16
7. OPERATING INSTRUCTIONS .....	18
7.1 USING PRESSURE WASHER .....	18
7.2 SHUTTING DOWN AND CLEANING UP .....	18
7.3 USING SPRAY NOZZLE .....	18
8. CLEANING AND MAINTENANCE .....	19
8.1 CLEANING THE SPRAY TIPS .....	19
8.2 CLEANING WATER INLET FILTER .....	19
8.3 ENGINE MAINTENANCE .....	19
8.4 SHORT TERM STORING .....	20
8.5 LONG TERM STORING .....	20
8.6 WINTERIZING PROCEDURES .....	21
9. TECHNICAL SPECIFICATIONS .....	22
10. TROUBLESHOOTING .....	23
10.1 TROUBLESHOOTING ENGINE .....	23
10.2 TROUBLESHOOTING PUMP .....	24
10.3 TROUBLESHOOTING ACCESSORIES AND CONNECTIONS .....	24
11. LIMITED WARRANTY .....	25


## 1. SAFETY ADVICE

### IMPORTANT, RETAIN FOR FUTURE REFERENCE AND READ CAREFULLY!

Do not attempt to install or operate this device until you have read the safety instructions in this manual. Safety items throughout this manual are labelled with **Danger**, **Warning**, or **Caution** depending on the risk type.

Read and understand the operating manual and labels on the product. Familiarize yourself with the product application and limitations and the specific potential hazards. Know the controls and their proper use. It is important to know how to stop the product and disengage the controls quickly.

#### 1.1 Definitions

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

#### DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

#### WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

#### CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

#### TOXIC GASES

Alerts against possible toxic gases which can be harmful to your health or deadly if you are exposed to them.

#### FLAMMABLE AND COMBUSTIBLE MATERIALS

Alerts against the presence of materials/gases which can be extremely flammable.

#### POISONOUS

Alerts against materials/gases which are very poisonous and can cause serious bodily harm or even death.

#### IMPORTANT

Installation, operation, or maintenance information which is important but not hazard-related.

#### 1.2 Safety Warnings

#### IMPORTANT

Never operate this product under the following conditions:

- If a noticeable change occurs in the engine speed
- If the engine misfires
- If there are flames or smoke in the area
- If there are excessive vibrations

#### DANGER

Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in fire and/or serious injury.

## 4 Safety Advice

### 1. SAFETY ADVICE (cont.)

#### 1.2 Safety Warnings (cont.)



#### **DANGER — WORK AREA SAFETY AND EXHAUST FUMES**

- Keep work area clean and well lit. Cluttered and dark areas invite accidents.
- Operate the product in a clean, dry and well-ventilated area.
- Do not operate the product in explosive atmospheres, such as in the presence of flammable liquids gases or dust. Power tools create sparks which may ignite the dust or fumes.
- Never operate the product on a steep slope.
- Keep children, pets, and bystanders away from the operating area. Breathing exhaust fumes can cause serious injury or even death.
- Never start or run the engine indoors. The exhaust fumes are dangerous, containing carbon monoxide, an odourless and deadly gas. Operate this product only in a well-ventilated outdoor area.

**GASOLINE ENGINES PRODUCE TOXIC CARBON MONOXIDE EXHAUST FUMES. BREATHING CARBON MONOXIDE CAN CAUSE NAUSEA, FAINTING, OR DEATH.**



#### **WARNING — INADEQUATE VENTILATION**

- Materials placed against or near the product, or operating the product in areas where the ambient temperature exceeds 40°C (104°F) (such as storage rooms or garages), can interfere with its proper ventilation features, causing overheating and possible ignition of the materials or buildings.
- Operate the product in a clean, dry, and well-ventilated area at least 6 1/2' (2 m) away from any buildings, objects, or walls.
- **NEVER OPERATE THIS PRODUCT INDOORS OR IN POORLY VENTILATED AREAS.**



#### **CAUTION — HOT ENGINE AND MUFFLER**

**THE ENGINE AND MUFFLER BECOME VERY HOT DURING AND AFTER USE. AVOID TOUCHING THE ENGINE OR THE MUFFLER DURING OR AFTER USE.**



#### **WARNING — PERSONAL SAFETY**

- Stay alert, watch what you are doing, and use common sense when operating a pressure washer. Do not use a pressure washer while you are tired or under the influence of drugs, alcohol, or medication. A moment of inattention while operating a pressure washer may result in serious personal injury.
- Use safety equipment. Always wear eye protection. Protective equipment such as a dust mask, non-skid safety shoes, a hard hat, or hearing protection used for appropriate conditions will reduce personal injuries.
- Do not use the product if the engine's switch does not turn it on or off. Any gasoline-powered product that cannot be controlled with the engine switch is dangerous and must be repaired.
- Remove any adjusting key or wrench before starting the pressure washer. A wrench or a key left attached to a rotating part of the pressure washer may result in personal injury.
- Do not overreach. Do not operate the product while barefoot or when wearing sandals or similar lightweight footwear. Wear protective footwear that will protect your feet and improve your footing on slippery surfaces. Do not stand on the product. Keep proper footing and balance at all times. This enables better control of the product in unexpected situations.
- Dress properly. Do not wear loose clothing or jewellery. Keep your hair, clothing, and gloves away from moving parts. Loose clothes, jewellery, or long hair can get caught in moving parts.
- Do not place your hands or feet near moving parts.
- Do not use while on a ladder.

## 1. SAFETY ADVICE (cont.)

### 1.2 Safety Warnings (cont.)

#### **FLAMMABLE AND POISONOUS MATERIALS**

- Gasoline is highly flammable and its vapours can explode if ignited. Take precautions when using fuel to reduce the chance of serious personal injury.
- When refilling or draining the fuel tank, use an approved fuel storage container while in a clean, well-ventilated outdoor area.
- Do not smoke or allow sparks, open flames, or other sources of ignition near the area while adding fuel or operating the product. Never fill fuel tank indoors.
- Equip the operating area with a fire extinguisher certified to handle gasoline or fuel fires.
- Keep grounded conductive objects, such as tools, away from exposed, live electrical parts and connections to avoid sparking or arcing. These events could ignite fumes or vapours.
- Always stop the engine and allow it to cool before filling the fuel tank. Never remove the cap of the fuel tank or add fuel while the engine is running or when the engine is hot. Do not operate the product with known leaks in the fuel system.
- Loosen the fuel tank cap slowly to relieve any pressure in the tank.
- Replace fuel tank and container caps securely and wipe up spilled fuel. Never operate the product without both caps securely in place.
- Avoid creating a source of ignition for spilled fuel. If fuel is spilled, do not attempt to start the engine near spill. Move the product away from the area of spillage and avoid creating any source of ignition until fuel vapours have dissipated.
- Store fuel in containers specifically designed and approved for this purpose.
- Store fuel in a cool, well-ventilated area, safely away from sparks, open flames, or other sources of ignition.
- Never store fuel or product with fuel in the tank inside a building where fumes may reach a spark, open flame, or any other source of ignition, such as a water heater, furnace, clothes dryer, or the like. Allow the engine to cool before storing indoors.

#### **CAUTION — ENGINE SAFETY**

- Certain components in this product and its related accessories contain chemicals which are known to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.
- The engine exhaust from this product contains chemicals which are known to cause cancer, birth defects, or other reproductive harm.
- Check fuel lines, tank, cap, and fittings frequently for cracks or leaks. Replace if necessary.
- This engine was shipped without oil. Before you start the engine, make sure you add oil according to the instructions in this manual. If you start the engine without oil, it will be damaged beyond repair and will not be covered under the warranty.
- When starting engine, ensure that spark plug, muffler, fuel cap and air filter are in place and secured.
- Do not crank engine with spark plug removed.
- If engine floods, move the throttle control to fast position and crank until engine starts.
- When operating the engine do not tip engine or equipment at an angle which will cause fuel to spill.
- Do not choke the carburetor to stop the engine.
- Never start or run the engine with the air cleaner assembly or the air filter removed.
- Transport or move the product only with empty fuel tank.
- Rapid retraction of starter cord (kickback) will pull hand and arm towards engine faster than you can let go. Risk of injury – broken bones, fractures, bruises, or sprains could result.
- Keep the engine and muffler free of grass, leaves, excessive grease, or carbon build-up to reduce the chance of a fire hazard.
- Do not tamper with any part of the engine to increase its speed.
- If the product makes an unusual noise or vibration, immediately shut off the engine, disconnect the spark plug wire, and check for the cause. Unusual noise or vibration is generally a sign of a problem.
- Use only attachments and accessories approved by the manufacturer. Failure to do so can result in personal injury.

# 6 Safety Advice

## 1. SAFETY ADVICE (cont.)

### 1.2 Safety Warnings (cont.)

#### CAUTION — SPECIFIC SAFETY ADVICE

- Avoid dangerous conditions. Always operate this product on dry, solid and level ground.
- Never operate this product on slippery, wet, muddy, or icy surfaces. The operating area should be free from any obstructions. There should be plenty of room for handling, and the operator should stay alert at all times.
- Do not use this product in wet or damp areas or expose it to rain. Do not use it in areas where fumes from paint, solvents or flammable liquids pose a potential hazard.
- Inspect this product. Check before turning it on. Keep guards in place and in working order. Form a habit of checking to see that keys and adjusting wrenches are removed from tool area before turning it on.
- Replace damaged, missing or failed parts before using the product. Make sure all nuts, bolts, screws, hydraulic fittings, hose clamps, etc., are securely tightened. Always check the oil level in the oil tank. Never operate this product when it needs to be repaired or when it is in poor mechanical condition.
- Never move or pull this product while spraying.
- Do not run the engine at a high speed when you are not using the product.
- **Risk of electric shock.** The water spray must never be directed towards any electric wiring, devices, or directly towards the pressure washer itself, or fatal electric shock may occur.
- **Risk of injury.** Do not direct the water flow at people. The high-pressure jet can be dangerous if misused, and therefore must not be directed at people, animals, electrical devices or the unit itself.
- **Risk of explosion.** When a combustibile liquid is sprayed, there can be danger of fire or explosion, especially in a closed area. Therefore, do not spray flammable liquids. Do not use acids and solvents with this product either. These products can cause physical injuries to the operator and irreversible damage to the device.
- Learn how to stop the product and release the pressure quickly. Familiarize yourself with the controls.



#### CAUTION — SPECIFIC SAFETY ADVICE

This product is capable of producing high pressure as rated in the Technical Specifications. To avoid rupture and injury, do not operate this product with components rated less than the unit itself (including but not limited to spray guns, hose, and hose connections).

#### WARNING — INJECTION HAZARD

Equipment can cause serious injury if the spray penetrates the skin. Do not point the gun at anyone or any part of the body. In case of penetration, seek medical aid immediately.

#### CAUTION — DETERGENTS

This device has been designed for use with detergents that are specifically approved for pressure washer use. The use of other cleaning detergents may affect the operation of the device and void the warranty.

#### CAUTION — SPRAY GUN

The spray gun kicks back, so hold it with both hands. The trigger gun safety lock prevents the trigger from being engaged accidentally. However, the safety feature DOES NOT lock the trigger in the **ON** position.

#### CAUTION — WATER CONNECTIONS

- For use with fresh and clean water only. Do not use this product with other liquids.
- The water supply system must be protected against backflow.
- Never use this product with water contaminated with solvents (e.g., paint thinners, gasoline, oil, etc.)
- Always prevent debris from being drawn into the product by using a clean water source and an additional water filter, if required.
- If this device is connected to a potable water system, the system must be protected against backflow.
- Suitable water temperature: from 5 to 40 °C (41 to 104 °F).



## 1. SAFETY ADVICE (cont.)

### 1.2 Safety Warnings (cont.)

#### CAUTION — SERVICE

- Before cleaning, repairing, inspecting, or adjusting, shut off the engine and make sure that all moving parts have stopped.
- Have your product serviced by certified repair personnel using only identical replacement parts. This ensures the safety of the product is maintained.
- Ensure proper maintenance. Check for misalignment or binding of moving parts, breakage of parts and other condition that may affect the product's operation. If damaged, have the product repaired before use. Many accidents are caused by poorly maintained equipment.

#### IMPORTANT — COLD WEATHER START

Do not operate this pressure washer in temperatures below 5°C (41°F). Operating pressure washer below 5°C (41°F) may cause damage to the pump and other pressure washer parts.

#### IMPORTANT — SAFETY FEATURES

**Thermal Relief Valve:** Protects the pump from overheating in case the nozzle gets clogged. This system should not be abused. Make sure the pump does not overheat.

#### CAUTION — PREVENT PUMP DAMAGE

- Do not run the engine for more than 5 minutes without pressing the wand trigger or damage to the pump might occur.
- Never let the engine run unless the product is connected to a water supply. Ensure water is running through the pressure washer before attempting to start the engine.
- Never run caustic fluids or acid through this product.

#### IMPORTANT — STORAGE

- Store the product in a well-ventilated area, with an empty fuel tank. Fuel should never be stored or placed near the product.
- When storing the product for winter, ensure that it is stored indoors (at room temperature), in a dry location away from any heat or ignition sources.
- If the product is to be stored with fuel in the fuel tank, add a fuel stabilizer (038-0907-6) to keep the gas from breaking down.
- To protect and extend the life of the product when storing it, use an antifreeze agent (039-8602-0) for the pump, which can be found at your local Canadian Tire store.

### 1.3 Intended Applications

This product is designed for specific residential applications. Do not modify or use this product for any application other than the one it was designed for. This equipment was not designed for industrial use. Please refer to the icons below for suggested applications. For questions regarding other uses, please refer to our website at [www.simoniz.ca](http://www.simoniz.ca) or call us at 1-866-474-6664.

#### IMPORTANT — APPLICATIONS



STAIRS



LAWN EQUIPMENT



VEHICLE



FENCING



DECK OR PATIO



GARAGE FLOOR



DRIVEWAY



SECOND STORY




SIDING



PAINT PREP

## 8 Exploded View / Parts List

### 2. EXPLODED VIEW

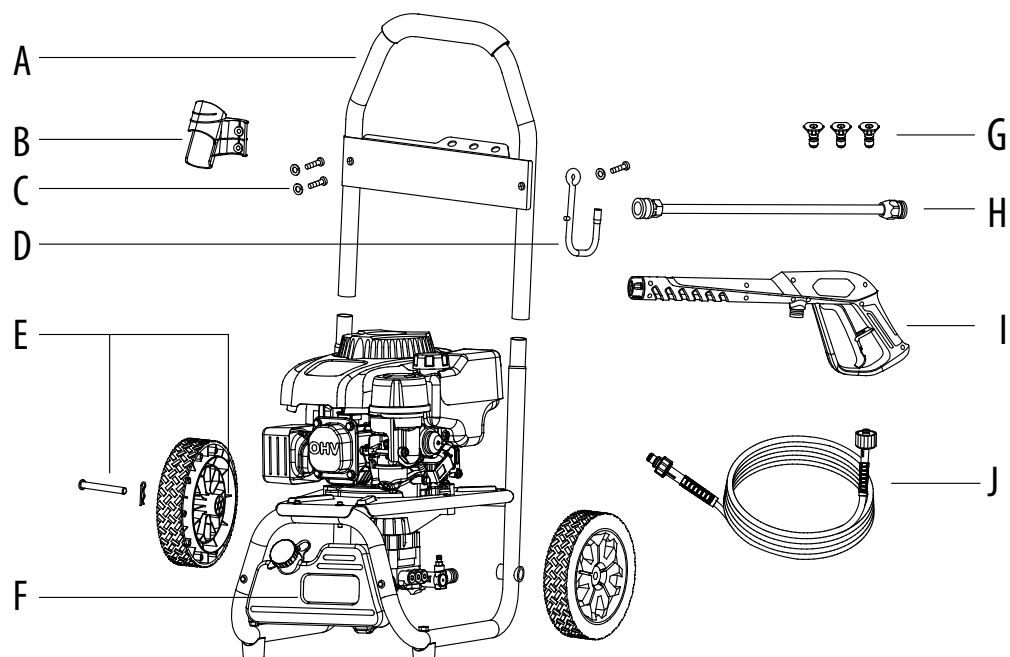

### 3. PARTS LIST

Item #	Part Name	Qty.	Part #
A	Handle Assembly	1	UG03-040-0000
B	Gun Holder	1	UG03-040-0002
C	Screw & washer	3	UG03-040-0003
D	Hose Hook	1	UG03-040-0004
E	Wheel Kit	2	UG03-030-2000
*F	Detergent Tank	1	UG03-060-0000
G	Tips Kit (3pcs)	1 set	UG03-050-0003
H	Quick-connect Wand	1	UG01-050-0002
I	Gun Assembly	1	UG01-020-0003
J	Pressure Hose	1	UG01-050-0004
N/A	Cleaning Needle	1	Pre-attached on the manual
N/A	Water filter	1	Pre-attached on the machine

Part Name	Qty.	Diagram
Spark Plug Wrench	1	
Engine Oil Funnel	1	

\* Detergent tank and water filter come pre-attached on the machine.

#### **WARNING**

Engine oil is not included. Always use oil type **SAE 10W-30**.  
**Add oil to the engine before starting it.**



## 4. ASSEMBLY INSTRUCTIONS

### 4.1 Surface Preparation

Before beginning any cleaning task, it is important to inspect the area for objects that could create a hazard. Remove any objects from the work area that could be tripped over, such as toys or outdoor furniture. Ensure that all doors and windows are closed tightly.

### 4.2 Water Supply (Cold Water Only)


- The unit must be used with cold water supply only. The water hose must be at least 13 mm (1/2") in diameter.
- The water flow rate must not fall below 18 litres per minute LPM (4.8 gallons per minute GPM), or the pump might be damaged. The flow rate can be determined by running water for one minute into an empty container.
- The water supply temperature must not exceed 40°C (104°F).

### WARNING — INJECTION HAZARD

Pressure washer can cause serious injury if the spray penetrates the skin. Do not point the gun at anyone or any part of the body. In case of penetration, seek medical aid immediately.


### 4.3 Assembly Steps

1

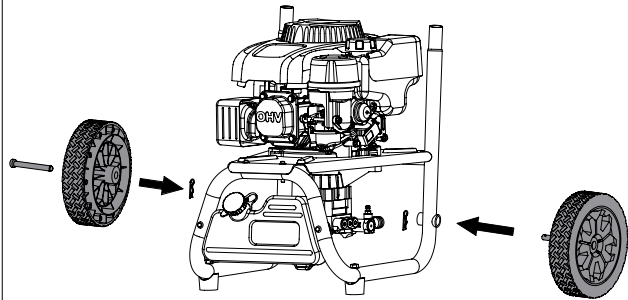

Detach clip from wheel shaft, and insert the wheel shaft with wheel inside of wheel receptacle. Push the clip back the shaft to secure the wheel in place.

2

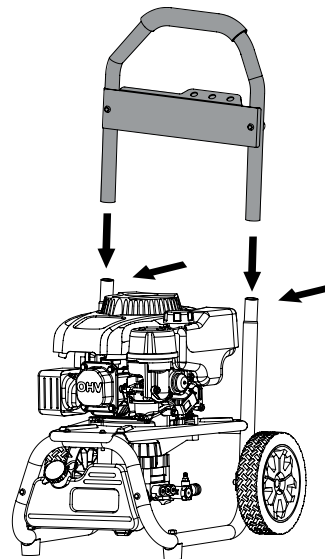


Install the handle assembly to metal cart by pressing the pin on the metal cart, align the pin to the handle hole and let pin slide inside of the hole.

# 10 Assembly Instructions

## 4. ASSEMBLY INSTRUCTIONS (cont.)


### 4.3 Assembly Steps (cont.)

3

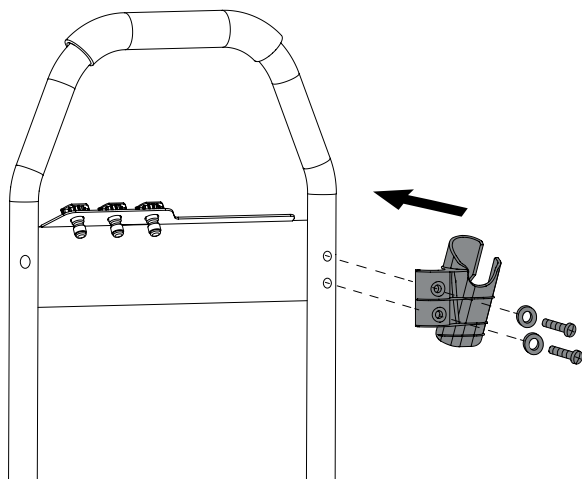


Align the gun holder holes on the handle, then fasten the gun holder using two screw & washer.

4

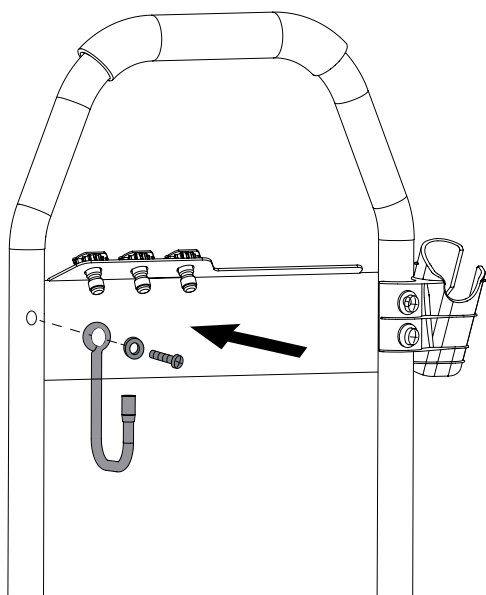

Align the hose hook hole on the handle, then fasten the hose hook using one screw & washer.

5

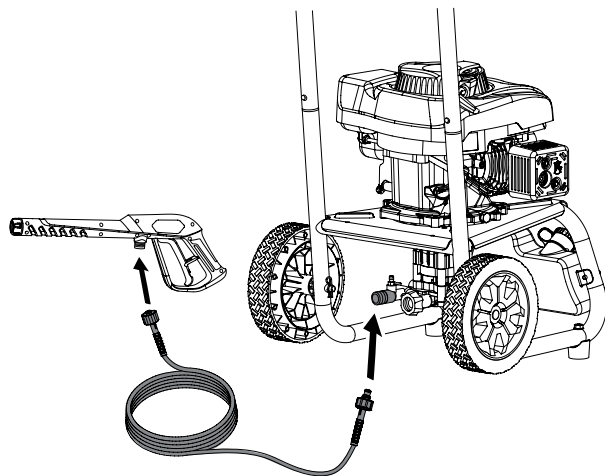


Connect pressure hose to the pump outlet and gun connector respectively (hand tighten only).

## 4. ASSEMBLY INSTRUCTIONS (cont.)


### 4.3 Assembly Steps (cont.)

6

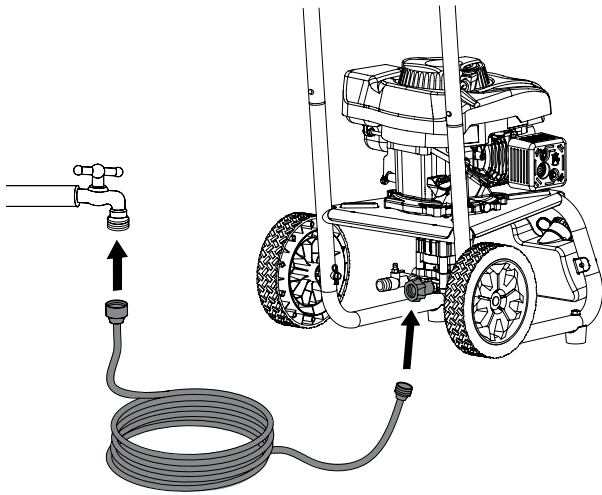

Connect garden hose to the pump inlet and water supply respectively, then turn water on (hand tighten only).

7

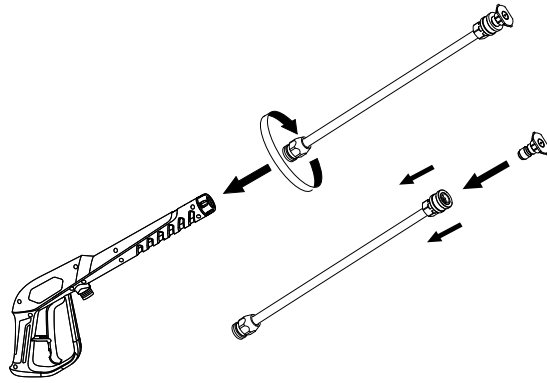

0°



25°




Detergent



Select the desired tip based on the following purposes:

- 0° (Red): Thin and powerful stream of water for difficult stains and debris removal.
- 25° (Green): Medium-angled spray for the detail cleaning.
- Detergent (Black): This nozzle must be used when applying detergents with the on-board detergent injection system. Applies detergents in low pressure only.

To install tip, gently slide the collar back before inserting the tip, then release the collar to lock the tip.

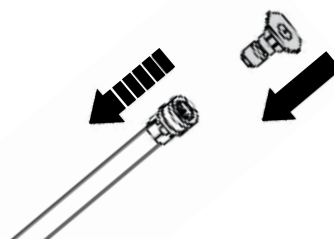

## 5. ENGINE OPERATION

### 5.1 Adding/Checking Oil

#### → IMPORTANT

Oil has been drained for shipping. Failure to fill engine with oil before starting engine will result in permanent damage and will void engine warranty. Add oil according to the instructions.

#### → IMPORTANT

##### Before each use:



- Check the oil and fuel level and fill if necessary.
- Make sure that the spark plug, muffler, fuel cap, and air filter are in place and secured.
- Do not crank engine with spark plug removed.

#### ⚠ WARNING

- Always check the oil level before starting the engine, making sure the pressure washer is on a level surface.
- Always use oil type **SAE 10W-30**, which can be found at your local **Canadian Tire** store (Product no. 028-9301-6).

**TIP:** When adding oil use provided oil funnel.


1

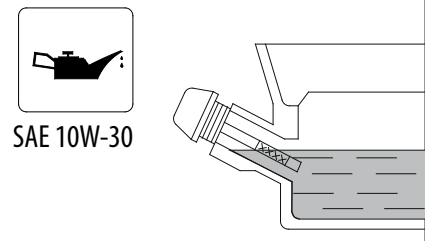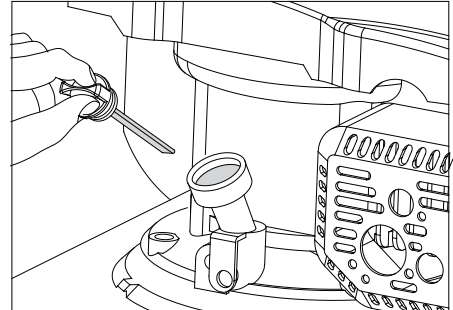

**Engine Oil Reservoir Capacity: 400 ml**

1. Remove oil tank dipstick and wipe it with a clean cloth.
2. Replace and retighten the dipstick.
3. Remove the dipstick again and check the oil level. It should be at the top of the full indicator on the dipstick.
4. If low, add oil slowly into the oil tank. Do not overfill. After adding oil, wait one minute and then recheck the oil level.
5. Replace and retighten the dipstick.

**Always check engine oil level before starting.**  
**Engine oil level should be up to point of overflowing filler neck (400 mL).**

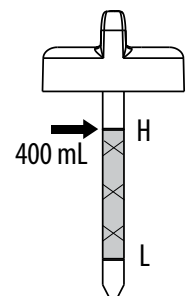

## 5. ENGINE OPERATION (cont.)

### 5.2 Adding Fuel


#### **WARNING**

- Make sure there is enough fuel in the fuel tank before operating the pressure washer.
- Use only clean, fresh, unleaded fuel. Use a minimum of 87 octane/87 AKI (91 RON).
- Do not use old gas, and do not mix oil with gasoline.
- Fuel and its vapours are extremely flammable and explosive. Fire or explosion can cause severe burns or death.

#### **IMPORTANT**

- Keep fuel away from sparks, open flames, pilot lights, heat, and other ignition sources.
- Check fuel hoses, tank, caps, and fittings for cracks or leaks. Replace if necessary.
- If fuel spills, wait until it evaporates before starting engine.
- Fill the fuel tank outdoors or in well-ventilated area.

2

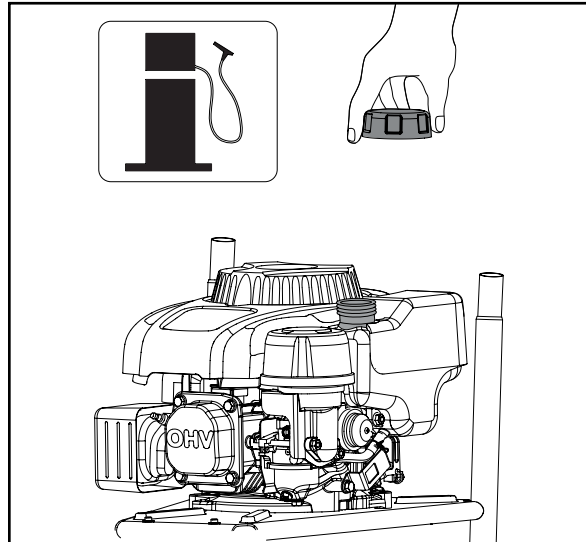

Fuel Tank Capacity: 0.8 L


1. Stop the engine (→ Stopping Engine) and let it cool at least 2 minutes before removing the fuel tank cap.
2. Clean the fuel cap area of dirt and debris. Remove the fuel tank cap and make sure the fuel filter is in place.
3. Fill the fuel tank with fuel. Never overfill the fuel tank. Fill tank to no more than 1/2" (13 mm) below the bottom of the filler neck to provide space for expansion caused by the engine heat. To allow for expansion of the fuel, do not fill above the bottom of the fuel tank neck.
4. Reinstall the fuel tank cap.

# 14 Engine Operation

## 5. ENGINE OPERATION (cont.)

### 5.3 Checking Air Filter

3

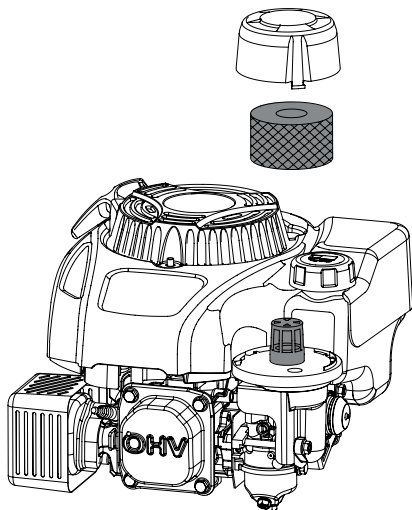

Open the air filter cover, pull out the air filter carefully, and wash it with clean water. Then soak the air filter in engine oil and squeeze the oil out. Place the air filter back then close the filter cover.




#### IMPORTANT

Clean air filter element for every 50 hours of use (every 10 hours under dusty conditions). Wash in high-flashpoint solvent, squeeze dry, dip in clean engine oil, and squeeze out excess oil.

### 5.4 Purging


4

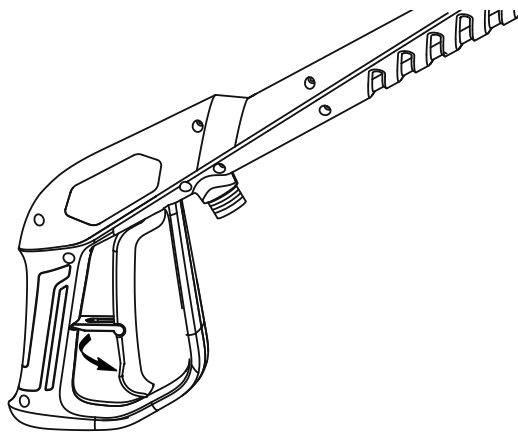

Release the safety trigger if it is locked.

5

#### PURGING

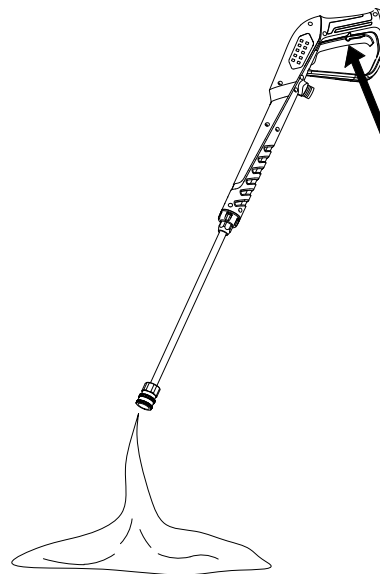

Purge air by squeezing the trigger on the gun until there is a steady stream of water.




#### WARNING — DEPRESSURIZE

After cleaning is completed, turn off the water supply and pull the trigger to depressurize the unit. Failure to do so might result in personal injury due to discharge of high-pressure water.


## 5. ENGINE OPERATION (cont.)

### 5.5 Starting Engine

6

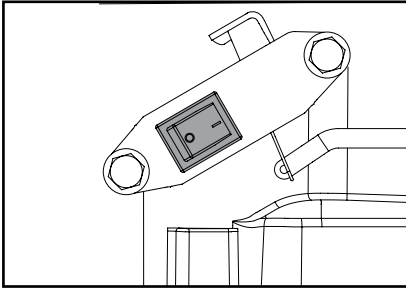

- a. Engine I/O switch is an automatic reset switch—it stays in the I (ON) position automatically. Do not push the I/O switch while starting the engine.

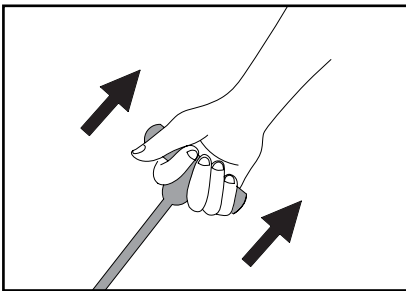


- c. Pull the recoil starter grip slowly until you feel resistance and then pull rapidly to avoid engine kickback.



#### CAUTION

Return the recoil starter grip gently to its starting position to prevent damage to the starter or the housing.

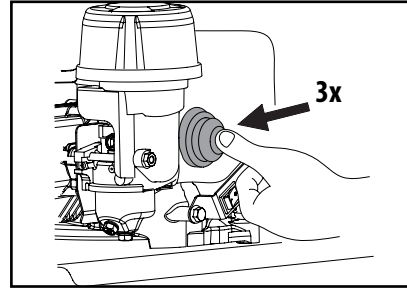

- b. Fully push primer bulb three times.



#### CAUTION

Don't push primer over 3 times. If the primer is pushed too many times, an excessive amount of fuel will flood the engine and the engine will be difficult to start.




#### CAUTION

If the engine is already warm, do not push the primer bulb.

### 5.6 Stopping Engine

7

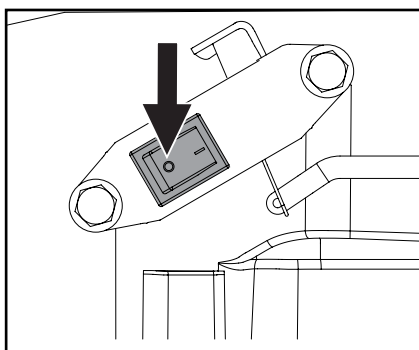

To stop the engine, push and hold the engine I/O switch for a few seconds until engine fully stops.



#### IMPORTANT

When restarting the engine after running it for over 5 minutes, do not push primer bulb before pulling the recoil starter.



# 16 Cleaning with Detergent Instructions

## 6. CLEANING WITH DETERGENT INSTRUCTIONS

### 6.1 Cleaning with Detergents

Working with a detergent ensures quick soaking of the dirt and allows the high-pressure water to penetrate and remove the dirt more effectively. Always spray detergent on a dry surface; do not pre-soak the area. Wetting the surface first dilutes the detergent and reduces its cleaning ability.

#### ➔ IMPORTANT

This pressure washer is intended for use with special pressure washer detergents only. Do not use powdered soaps, which will clog the injection system. Follow the detergent manufacturer's directions or call the Simoniz® toll-free number at 1-866-474-6664 if you have any questions or concerns.


#### ➔ IMPORTANT

Working with a detergent ensures quick soaking of the dirt and allows the high-pressure water to penetrate and remove the dirt more effectively. Always spray detergent on a **dry** surface; do not presoak the area. Soaking the surface dilutes the detergent and reduces its cleaning ability.


#### ⚠ WARNING

Damage may occur to painted surfaces if chemicals (detergents) are allowed to dry on them. Wash and rinse a small section at a time. Avoid working on hot surfaces or under direct sunlight.

### 6.2 Working with the Detergent

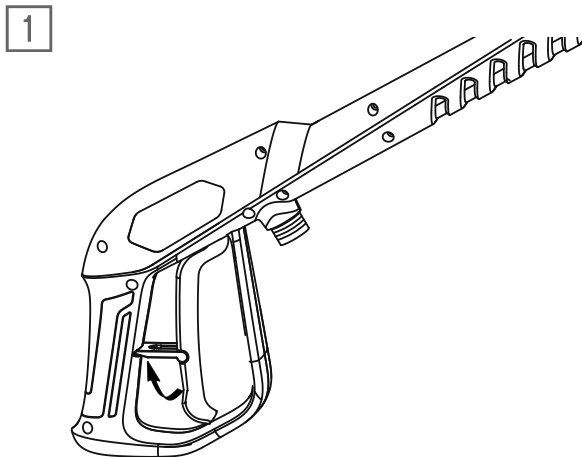

Engage the safety lock on the spray gun.

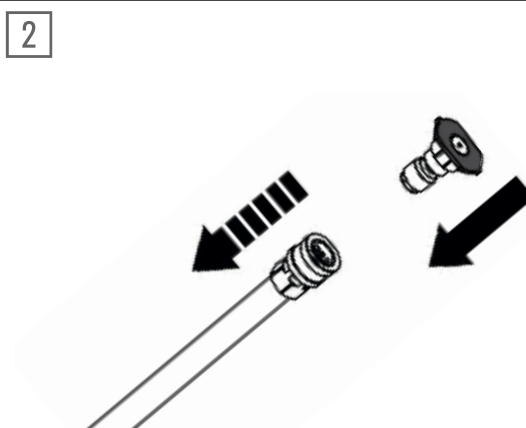


Insert the (detergent) black tip by gently sliding the collar back on the quick-connect wand before inserting the tip, then release the collar to lock the tip.

## 6. CLEANING WITH DETERGENT INSTRUCTIONS (cont.)

### 6.2 Working with the Detergent (cont.)

3

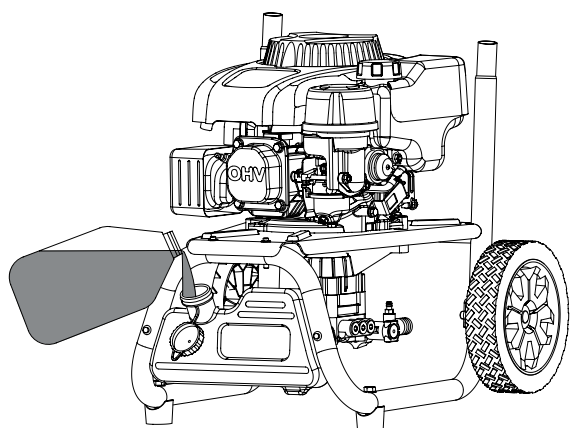

1. Gently pull detergent lid out of the tank neck and fill with detergent. Replace the tank lid once detergent is filled.
2. Apply the detergent to a dry work surface from bottom to top.
3. Allow detergent to remain on the surface for a short time before rinsing. Do not allow detergent to dry on the surface.
4. Rinse with clean water under high pressure.
5. When you finished working with detergent, fill clean water in the tank and spray clean water until the tank is empty.



#### CAUTION


Damage may occur to painted surfaces if chemicals are allowed to dry on them. Wash and rinse a small section at a time.

# 18 Operating Instructions

## 7. OPERATING INSTRUCTIONS

### 7.1 Using Pressure Washer

1. Start the engine.
2. Install appropriate spray nozzle.
3. Release the trigger safety lock if it is locked.
4. Purge the air by squeezing the trigger on the gun until there is a steady stream of water.
5. Position the tip of the wand 15-20 cm (6-8") away from the surface to be cleaned, at an angle appropriate to the spray nozzle used (0°, 25° or detergent).

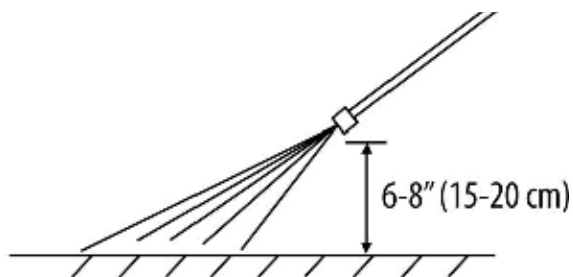

### 7.2 Shutting Down and Cleaning Up

1	(Skip this step if you are not using detergent.) After cleaning with detergent, fill the detergent tank with clean water. Spray water at a low pressure for one minute so that all detergent is flushed out of the system.
2	Stop the engine.
3	Turn off the water supply and disconnect the water supply from the water inlet.
4	Pull the gun trigger to release any remaining water pressure.
5	Engage the trigger safety lock on the spray gun and rest the gun on lower and upper supports.




#### WARNING


Turn off the water supply and pull the trigger to depressurize the unit. Failure to do so might result in personal injury due to discharge of pressurized water.

### 7.3 Using Spray Nozzle

**This pressure washer comes with 5 different nozzles that can be installed on the stainless steel wand. The spray pattern is adjusted by installing the appropriate spray nozzle.**

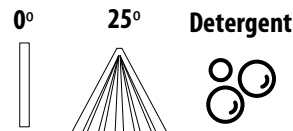

- 0° (Red): Thin and powerful stream of water for difficult stains and debris removal.
- 25° (Green): Medium-angled spray for the detail cleaning.
- Detergent (Black): This nozzle must be used when applying detergents with the on-board detergent injection system. Applies detergents in low pressure only.

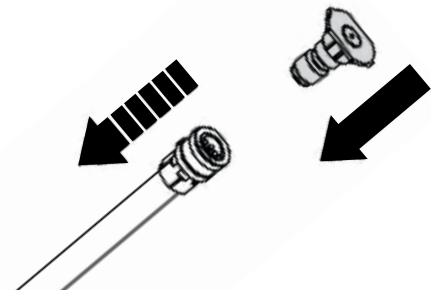

#### Installing spray nozzle to the quick-connect coupler:


1. Pull the coupler ring back and insert the desired nozzle.
2. Release the coupler ring to lock it back in place.

## 8. CLEANING AND MAINTENANCE

### 8.1 Cleaning the Spray Tips


#### WARNING

Clogging of the spray tip increases the water pressure and might damage the pump unit.

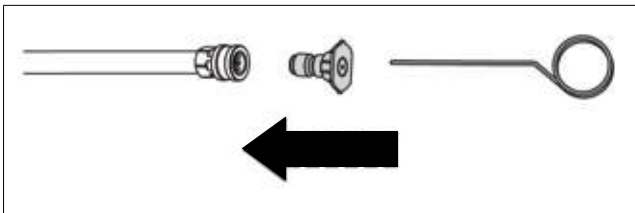

Clean the spray tip by carefully inserting the provided cleaning needle, or a thin, sharp object (e.g., paper clips) into the tip to remove deposits.

### 8.2 Cleaning Water Inlet Filter

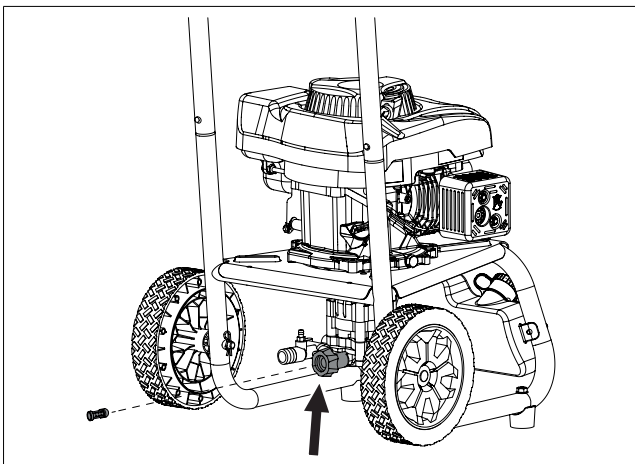

- This pressure washer is equipped with a water inlet filter.
- The water inlet filter must be kept clean at all times; otherwise, it can restrict the water flow to the pump unit and damage it.
- Remove and clean the water inlet filter.

#### WARNING

**DO NOT** operate this pressure washer without the water inlet filter in place, as deposits could build up internally and affect the functioning of the unit.


### 8.3 Engine Maintenance

#### Draining Engine Oil

The engine oil should be replaced after the first 20 hours of operation, or after the first month of use. After that, it should be replaced every 100 hours or every 6 months.

#### To Drain the Engine Oil:

1. Loosen the oil tank dipstick.
2. Place an oil container underneath the opening on the main frame.
3. Remove the oil plug and drain the oil.
4. Once the oil has been completely drained, retighten the hex screw and oil tank dipstick.

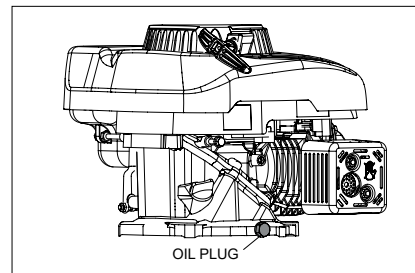

#### Recommended Engine Oil

Add oil as described in chapter → Adding/Checking Oil.

#### IMPORTANT


Used oil is a hazardous waste product and must be disposed of properly. Do not discard with household waste. Check with your local authorities, service centre, or Canadian Tire for safe disposal / recycling facilities.

#### Inspecting, Replacing or Cleaning the Spark Plug

The spark plug should be checked every 100 hours of operation or every 6 months.

#### To Replace or Clean the Spark Plug:


1. Disconnect the spark plug wire by pulling it off the spark plug.

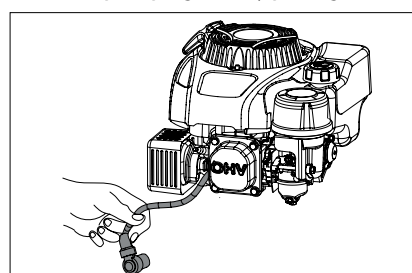


## 8. CLEANING AND MAINTENANCE (cont.)

### 8.3 Engine Maintenance (cont.)

- Using provided spark plug wrench, remove the spark plug by turning it counter-clockwise. If there is a carbon sediment build-up, remove it. If there is too much carbon sediment, replace the spark plug.

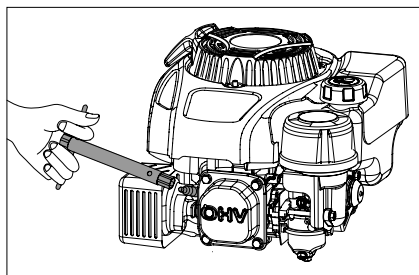

- Check the gap with a wire gauge. If necessary, reset the gap to 0.7-0.8 mm. Install and tighten the spark plug to the recommended torque—180 lb-in (20 Nm).
- Reinstall the spark plug wire and protection cage in reverse order.

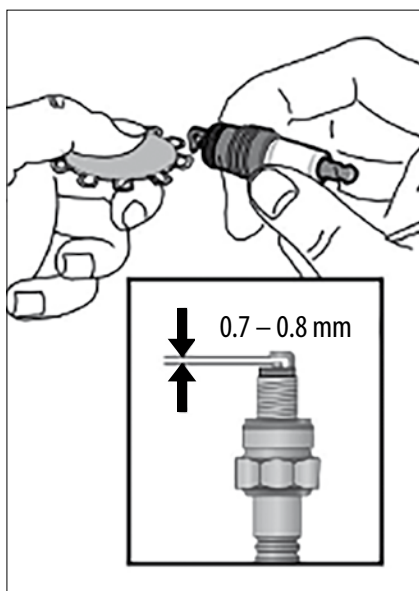

**NOTE:** In some areas, local law requires using a resistor spark plug to suppress ignition signals. If this engine was originally equipped with a resistor spark plug, use the same type for replacement.

### 8.4 Short Term Storing


Store idle product out of the reach of children and do not allow persons unfamiliar with the product or these instructions to operate it. This product is dangerous in the hands of untrained users. Cover and store indoors, in a dry, well-ventilated area, such as a tool shed.

### 8.5 Long Term Storing

Long term storage of the pressure washer requires additional preventive measures to protect it against deterioration.


#### 1. Drain Fuel

Move the fuel valve to **OFF** position and remove the hex screw from the carburetor. Then, move the fuel valve to **ON** position to drain the fuel from the tank, carburetor, and hose. Screw the carburetor drain hex screw back once the fuel has been completely drained.

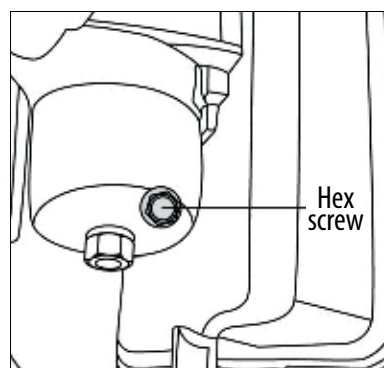

#### 2. Add Fuel Stabilizer

If you do not wish to drain the fuel tank, add a fuel stabilizer (038-0907-6) into the fuel tank. Run the engine at least five minutes after adding the stabilizer to distribute it inside the fuel system.

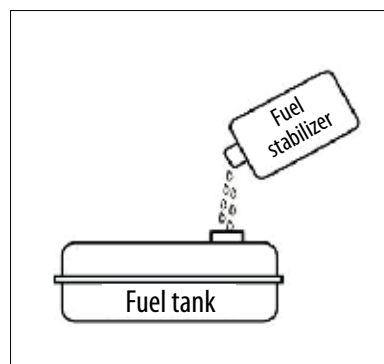


## 8. CLEANING AND MAINTENANCE (cont.)

### 8.5 Long Term Storing (cont.)

#### 3. Drain Oil

- Drain the oil (follow the "To Drain the Engine Oil" instructions on page 19).
- Remove the spark plug.
- Pour one tablespoon of oil through the spark plug hole—type 10W-30.
- Slowly pull the starter cord handle until you feel tension, which indicates the piston is on its compression stroke and leave it in this position.
- Replace the spark plug.

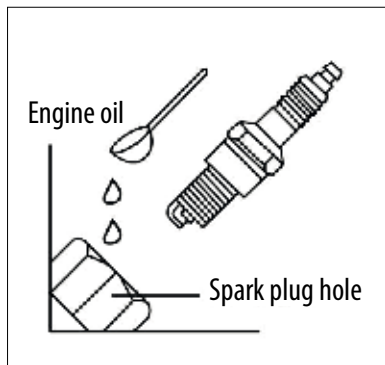


#### ➔ IMPORTANT

- If the pressure washer is to be stored with gasoline in the fuel tank and carburetor, it is important to reduce the hazard of gasoline vapour ignition.
- Select a well-ventilated storage area away from any appliance that operates with a flame, such as a furnace, water heater, or clothes dryer. Also avoid any area with a spark-producing electric motor, or where power tools are operated.
- If possible, avoid storage areas with high humidity, because that promotes rust and corrosion.
- Place the pressure washer on a level surface. Tilting can cause fuel or oil leakage.
- Do not use plastic sheets as a dust cover. A non-porous cover will trap moisture around the pressure washer, promoting rust and corrosion.

### 8.6 Winterizing Procedures

Winterizing your pressure washer will help protect and prolong its life. We strongly recommend you to follow the below steps and use Briggs & Stratton Pump Saver™ (039-8602-0). This will keep the internal parts lubricated, protected from rust, and prevents the pump from freezing.

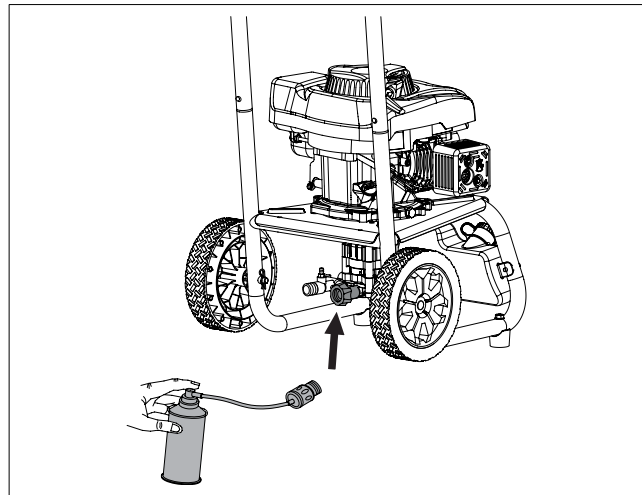

- Connect the pump saver to the inlet adaptor.
- Depress button on top of the pump saver container.
- Continue until fluid exits the pressure hose.
- Remove the hose from pump inlet.

### 9. TECHNICAL SPECIFICATIONS

---

Maximum Pressure:	2500 PSI
Rated Water Pressure:	2250 PSI
Rated Water Flow:	7.6 Litres Per Minute LPM (2.0 Gallons Per Minute GPM)
Minimum Inlet Pressure:	30 PSI
Maximum Inlet Pressure:	100 PSI
Pump Type:	Heavy-Duty Maintenance free Axial Cam
Thermal Relief Valve:	Included
Detergent Tank:	1.2 L
Maximum Temperature of Pumped Water:	40°C (104°F)
Engine Power (OHV):	3.6 HP
No Load Speed:	3800 RPM
High Pressure Hose Length:	25' (7.6 m)
Inlet and Discharge Ports:	3/4" (11.5TPI) standard garden hose connector
Displacement:	150 cc
Net Weight:	52 lb 14oz (24 kg)
Oil Type:	SAE 10W-30
Oil Capacity:	400 mL
Fuel Type:	Unleaded Gasoline
Fuel Tank:	0.8 L



## 10. TROUBLESHOOTING

**NOTE:** If your unit still is not functioning properly once you have used this guide, please call the Simoniz® toll-free service number at 1-866-474-6664. Please do NOT bring the unit back to the store until you have called this number.

### 10.1 Troubleshooting Engine

Problem	Cause	Solution
Engine doesn't start or difficult to start.	No fuel.	Fill the fuel tank with regular gasoline.
	Low oil. Will damage engine.	Minimum oil should be 400 mL.
	Excess water pressure in pump or hose.	Release water pressure by squeezing trigger on gun.
	Clogged carburetor.	Clean the carburetor. Refer to the instruction manual.
	Carbon build-up on spark plug.	Clean the spark plug. Refer to the instruction manual.
	Incorrect starting method.	Use correct starting method. Refer to the instruction manual.

Problem	Cause	Solution
Engine stops after starting.	Low oil or no fuel.	Check oil and fuel levels.
Engine lacks power.	Clogged air filter.	Clean or replace the air filter. Refer to the instruction manual.
	Clogged carburetor.	Clean the carburetor. Refer to the instruction manual.
Carburetor leaks.	Carburetor is clogged.	Clean the carburetor. Refer to the instruction manual.
Starter rope doesn't recoil.	Recoil mechanism is broken.	Call the Toll-free Hotline.
Engine sounds abnormal or overloaded.	Clogged nozzle.	Clean nozzle with tip cleaner.
	Pressure is too high.	Call the Toll-free Hotline.
Does not press the primer bulb	Press the primer bulb 3 times before pulling the recoil starter	
Pressed the primer bulb more than 3 times	Pulling the recoil starter 5 times and waiting for another 5 minutes. Then press the primer bulb 3 times and pulling the recoil starter to start engine.	

## 10. TROUBLESHOOTING (cont.)

### 10.2 Troubleshooting Pump

Problem	Cause	Solution
No pressure; low pressure.	Nozzle tip not attached.	Attach required nozzle tip.
	Water supply faucet closed.	Turn on faucet. Ensure there are no kinks or blockage in hose.
	Water supply pressure is low.	Ensure faucet is fully opened. Check to make sure water supply is a minimum 30 PSI, 4 GPM.
	Inlet water filter is clogged.	Clean the water filter. Refer to the instruction manual.
	Air in pump.	Squeeze trigger to release the air in pump when the machine is running.
	Clogged check valve.	Call the Toll-free Hotline.
	Damaged pump.	Call the Toll-free Hotline.
Pressure too high.	Clogged nozzle.	Clean nozzle with tip cleaner.
Water or oil leaks out of pump.	Damaged seal ring.	Call the Toll-free Hotline.
Cold water keeps draining out of thermal relief valve.	Defective thermal relief valve.	Call the Toll-free Hotline.

### 10.3 Troubleshooting Accessories and Connections

Problem	Cause	Solution
No intake of detergent. <b>(For use of on-board detergent injection system)</b>	The detergent siphon tube is not connected.	Connect detergent siphon tube properly. Refer to the instruction manual.
	Damaged detergent siphon tube.	Replace the detergent siphon tube.
	Wrong nozzle.	Use black nozzle when applying detergent. Refer to the instruction manual.
	Clogged nozzle.	Clean nozzle.
	Clogged pump detergent siphon fitting.	Detach the detergent siphon tube and clean the fitting with tip cleaner.
	Detergent is too thick. Clogged detergent filter.	Use only detergent approved for use with pressure washer.
The trigger can't be squeezed.	Safety lock is not open.	Open the safety lock. Refer to the instruction manual.
High pressure hose can't be connected to pump or gun.	The O-ring is not lubricated.	Put lubricating oil or water on the O-ring.

IF YOU ENCOUNTER ANY ADDITIONAL DIFFICULTIES NOT LISTED, VISIT OUR WEBSITE AT

**WWW.SIMONIZ.CA**

OR CALL CUSTOMER SERVICE FOR HELP AT

1-866-474-6664.

## 11. LIMITED WARRANTY

Always keep your receipt as proof of purchase.

We're here to help! If you have any questions or comments, call our toll-free hotline 1-866-474-6664. Have your serial number ready. The serial number can be found on the back plate, located on the side of the unit.

This product has a Parts Replacement, Product Exchange and/or Repair Warranty only. **NO REFUNDS** will be provided. Please see stores for Product Exchange details.

### Two (2) Year Warranty — Engine

This product is guaranteed to be free from defects in material and workmanship for two years from the date of its original purchase. If such a defect appears during the warranty period, upon presentation of proof of purchase, Trileaf Distribution will repair or replace the product (at its discretion). Shipping charges may apply.

### Ninety (90) Day Warranty — Accessories

Trigger gun, hose, spray wands and other accessories are guaranteed for ninety (90) days from the date of purchase. You may purchase accessories directly through place of purchase, or by calling our toll-free hotline 1-866-474-6664.

This warranty does not cover accidental damage, unreasonable use, normal wear and tear, use of improper detergents, freezing, neglect, or non-compliance with the Operating Instructions. The warranty does not cover loss of use or other consequential damages arising from any of the above, nor does it cover repairs made or attempted by unauthorized persons.

The warranty is void if the equipment is used for commercial, rental or industrial purposes.

If you have further questions, please visit our website ([www.simoniz.ca](http://www.simoniz.ca)) or call 1-866-474-6664.

### Imported for

**Trileaf Distribution Trifeuil, Toronto, Canada M4S 2B8**